LED Stage Lighting Operating Manual

LED Flat Par Light

--- 18PCS*15W (6in1)



Thank you so much to choose this product; it is adopting the most advanced lamps, which is called LED lamps. It conquers a lot of disadvantages such as power wasting, short using life, high temperature, etc. It has advantages of power saving, long life (it can reach 60,000.00 hours in general circs), high brightness, fresh colors...It is the best stage illuminating and various effect decorative products.

Technical:

Voltage: AC110-220V, 50/60HZ

Power supply: 300W

Light source: 15W*18PCS Color: R,G,B,W, Y, UV

Channel:10/6CH

Operation: DMX512, Auto, Sound, Master-slave

Security:

- 1. Make sure the user voltage cannot higher or lower than the regulate value of the user manual.
- 2. Please take more attention while installing the fixtures. Avoid touching exposed AC cord, or will cause deadly accident.
- 3. When installing the fixtures, make sure the fixtures are not exposed in extremely hot, humid or dusty environment. Make sure the distance between the fixture and the lighted object is not less than 0.5 meter. Make sure there is no combustible or explosive object around 0.5 meters.

DMX Display

No	Show	Function	Instruction
1	d001	DMX Address (1~512)	DMX-512 address set, 6 Channels
I			mode
2	A001	DMX Address (1~512)	DMX-512 address set, 10 Channels
2		,	mode
3	r255	Red (0~255)	UP、DOWN Change brightness
4	G255	Green (000~255)	UP、DOWN Change brightness
5	b255	Blue (000~255)	UP、DOWN Change brightness
6	U255	White (000~255)	UP、DOWN Change brightness

7	Y255	yellow (0~255)	UP、DOWN Change brightness
8	P255	Purple (0~255)	UP、DOWN Change brightness
9	FH99	Strobe flash (01~99)	UP、DOWN Change the speed
10	CL01	Different Colors Output (01~08)	UP、DOWN Change brightness
11	CC99	Colors Jump Change (01~99)	UP、DOWN Change the speed
12	DE99	Colors Gradate (01~99)	UP、DOWN Change the speed
13	CP99 Colors Pulse Change (01~99)		UP、DOWN Change the speed
14	SU01	Colors sound-Active (01~09)	UP、DOWN Change the effects

DMX512Controlン 10 Channel Mode (A001)

СН	Function	Instruction
СН1	Dimmer	R, G, B, W, Y, UV dimmer: from dark to bright
CH2	R dimmer	R dimmer: from dark to bright
СНЗ	G dimmer	G dimmer: from dark to bright
CH4	B dimmer	B dimmer: from dark to bright
CH5	W dimmer	W dimmer: from dark to bright
СН6	Y dimmer	Y dimmer: from dark to bright
CH7	UV dimmer	UV dimmer: from dark to bright
CH8	Strobe	R, G, B, W, Y, UV strobe: slow to fast
СН9	Function choice	0~50: DMX 8CH Control. 51~100: Different Colors Output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH10	Function speed	Speed function, from slow to fast

DMX512Controlン 6 Channel Mode (D001)

СН	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
СНЗ	B Dimmer	Dimmer- Dark to Bright
СН4	W Dimmer	Dimmer- Dark to Bright
CH5	Y Dimmer	Dimmer- Dark to Bright
СН6	UV Dimmer	Dimmer- Dark to Bright